

User’s Manual

V1538

Legal Notices

All rights reserved. Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of VIDEOCON is prohibited.

VIDEOCON operates on a policy of continuous development. VIDEOCON reserves the right to make changes and improvements to any of the products described in this document without prior notice.

Under no circumstances shall VIDEOCON be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

The contents of this document are provided as it is. Except as required by applicable law, no warranties of any kind, either deselected or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. VIDEOCON reserves the right to revise this document or withdraw it at any time without prior notice.

The availability of particular products may vary by region. Please check with VIDEOCON Executive.

Software Update Information

To enhance device performance, we recommend that you get in touch with the nearest VIDEOCON Authorized Service Center, regarding the availability of updated firmware for your device. Please see the

enclosed Service Center Directory for the VIDEOCON Authorized Service Center nearest to your location.

Safety Precautions

Please comply with these precautions to avoid putting yourself or other around you in a dangerous or illegal situation, and ensure peak performance of your device.

 
Icon	Description
	ROAD SAFETY Do not use your phone while driving.
	HOSPITALS Switch off your device near hospitals and medical equipment.
	AIRCRAFT Switch off your device in aircraft. Wireless devices can cause interference in aircraft.
	REFUELLING Switch off the device when refueling. Do not use the device at refueling point.
	BLASTING AREAS Switch off the device near blasting areas.
	USE SENSIBLY Use in normal condition, as explained in the User’s manual. Do not touch the antenna unnecessarily.
	QUALIFIED SERVICE Only qualified personnel may install or repair phone.

	BATTERIES Use only approved batteries. Do not connect incompatible products.
	WATER-RESISTANCE Your device is not water-resistant. Keep it dry.

Important safety measures

Your phone is designed to comply with all the necessary precautions and requirements and should be treated with care. The suggested safety measures will help you to use this product without causing you any health hazards.

- When buying a cell phone, make sure it has a low SAR (Specific Absorption Rate).



- Use a wireless hands-free system (headphone, headset) with a low power Bluetooth emitter.

- Either keep calls short or send a SMS instead. This advice applies especially to children, adolescents and pregnant women.

- Whenever possible, only use cell phone when the signal quality is good.

- People having active medical implants should keep their

cell phone at least 15cm away from the implant.

 
Specific Absorption Rate (SAR)

Your phone meets the SAR requirements for exposure to radio waves, recommended by Govt. of India. Your mobile phone is a radio transmitter and receiver. It is designed and manufactured so as not to exceed the limits for exposure to radio-frequency (RF) energy, as recommended by the Govt. of India. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The limits include a substantial safety margin designed to ensure the safety of all persons, regardless of age and health.

The exposure standard for mobile phones employs a unit of

Disclaimer

Some applications accessible through your mobile belong to third parties

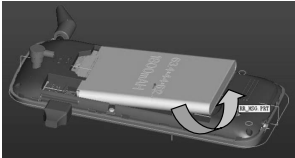

Third party content and services are provided “as is.” VIDEOCON does not warrant content or

 
create derivative works, exploit, or distribute in any manner or medium any content or services displayed through this device.

and are protected by copyright, patent, trademark and/or other intellectual property laws. Those applications are provided solely for your personal noncommercial use. You may not use any application in a manner that has not been authorized by the application owner or provider.

Without limiting the foregoing, unless expressly authorized by the applicable

measurement known as SAR (Specific Absorption Rate). The SAR limit recommended by the Govt. of India is 1.6 Watt/kg taken over a volume containing a mass of 1 gram of tissue.

The highest SAR value for **V1538** is **0.381 W/Kg**. Press *#07# to check the SAR value on your phone display.

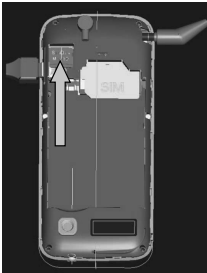

content owner or service provider, you may not modify, copy, republish, upload, post, transmit, translate, sell,

Third party services may be terminated or interrupted at any time, and VIDEOCON makes no representation or warranty that any content or service will remain available for any period of time. Content and services are transmitted

by third parties by means of networks and transmission facilities over which VIDEOCON has no control. Without limiting the generality of this disclaimer, VIDEOCON expressly disclaims any responsibility or liability for any interruption or suspension of any content or service made available through this device.

VIDEOCON is neither responsible nor liable for customer service related to the content and services. Any question or request for service relating to the content or services should be made directly to the respective content and service providers.

Getting Started

 
Assembling the device

- Gently hold the back cover and slide in upward direction to open the back cover.
- If the battery is in the compartment, lift and pull it out in the direction of the arrow (shown below).
- Insert the SIM cards into their respective slots. Make sure that the contact areas on the cards are facing the connectors on the device as shown below.
- Insert memory card. Take compatible micro SD card, and place it into its respective slot.

Charge the battery

To charge the device battery:

- Take the USB cable from the device packaging, and attach it to power adapter. Now connect the power adapter into a standard AC wall outlet.
- Connect the micro USB connector on the cable into its designated port at the bottom of the device. The battery level indicator on

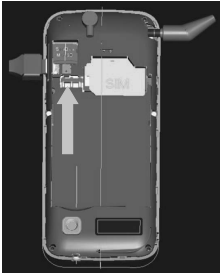

the device screen will start scrolling horizontally to indicate that the battery is being charged.

Note: Exercise extreme caution while connecting the charger to the device. The connectors on the charger and on the phone may get damaged if too much force is applied while connecting them.

If the battery is completely discharged, it may take a while before the on-screen charging indicator starts scrolling.

- When the battery is fully charged, the battery level indicator on the device screen will stop scrolling.



- Once the charging is complete, disconnect the charger from the device and then from the wall outlet.

Battery Use

To extend the battery life of your device:

- Use the standard wall charger to charge the battery for the first time.
- During the first 3-4 charge cycles, charge the battery until the battery indicator on the display stops scrolling.
- Avoid partial charging. Also, wait for the battery to discharge completely before charging it again.
- Charge the battery using the USB cable only if the recommended wall charger isn't readily available.

- Avoid keeping the device on vibrate mode.



Phone Layout

Key Layout

In idle mode, press **Left Soft Key** to access the main Menu. When navigating the menu, press **Left Soft Key** to open the desired option.

Right Soft Key

In idle mode, press **Right Soft Key** to access Names. Use to perform functions that display in the lower right of the display screen. For example, it works as a Back key to navigate the previous screen.

Dial Key

- In idle mode, enter the phone number to call and then press **Dial key** to choose desired SIM, which you want to use to initiate the call.

- Press **Dial key** to answer an incoming call.

- In the idle mode, press **Dial key 2** once to view the **Call History**.

Power/ End Key

- End or reject calls.
- Press and hold to switch on or off the device.

- Cancel active menu and return to the idle screen.

OK Key

In menu, use **OK key** to perform the functions that display in the lower left of the display screen.

Keypad (0-9)

- In idle mode, use the 0-9 keys to **enter a number** to call.
- Select and hold a digit key to dial its associated speed dial contact.
- In idle mode, press and hold “1” key for **Voice mail**.
- While entering the number on the idle screen, the device suggests you matching contacts so that you can scroll to the desired contact. Once the contact is selected, press the **Dial key** and select **SIM1** or **SIM2**, which you want to use to initiate a call to the contact.

Notification Icons

Notification (indicator) icons provide information such as battery level, network signal strength, alarm activated, and so forth.

Icon	Description
	Battery level indicator
	SIM1/2 Network signal strength
	Roaming is active
	Unread messages
	Alarm is activated
	Vibrate(meeting) profile is active
	Indoor profile is activated
	Outdoor (Vibrate and ring) profile is active
	Earphone inserted
	Bluetooth activated

Basic Operations

Switch on or off the device

To switch on the phone, press and hold the **Power/ End key**. To switch off the phone, press and hold **Power/ End key** again.

6

Accessing Menu

To access your device menu:

- In idle mode, press **Left soft key (Menu)** to view various device functions, and settings required for configuring the device.
- Use the navigation keys to scroll to Menu applications.
- Press the **OK key**, to confirm the highlighted option.
- Press **Back** to move back one level. Press **End key** to return to the idle mode.

Making a Call

Using keypad

To make a call using the keypad, enter the phone number including the area code. Press **Delete (Right soft key)** to erase a digit, or press and hold **Delete key** to erase the complete number.

For international calls, add the “+” character that replaces the international access code, and enter the country code, area code (omit the leading 0, if necessary), and phone number. Press **Dial key** & choose SIM1/2 which you want to use to initiate the call.

Using Phonebook

Press **Right soft key** in the idle mode to access Names of the contacts or press **Menu→Phonebook** to view the contacts. Use the **Up and Down Navigation Keys** to select the contact you wish to call, and press the **Dial key 2** & choose SIM1/2 which you want to use to initiate the call.

Using Call History

Press **Menu→Call History** and retrieve a number from the recently all, dialed, received, and missed calls. Press **Dial key 2** & choose SIM1/2 which you want to use to initiate the call.

Using headset

Use the headset from the product packaging and connect it to its designated slot at the right hand side of the device. The headset acts as the antenna for your device and helps to detect radio signals from nearby stations. You can receive a call with the help of hook switch.

Answering Calls

To answer an incoming call, press the **Dial key** or **Answer (Left Soft Key)**. To put phone on silent mode, press **Right soft key** to Silent the ringtone.

Press **Power/ End key** to reject the call.

Working with Call Options

During an active call, press **Hands free(Right soft key)** to put call on loudspeaker, and press it again to use the earpiece of the phone. Select **Options (Left soft key)** to view the following options:

- Hands free:** Allows you to put active call on loudspeaker. Press it again to use earpiece.
- Add new call:** Input number to add new call.
- Hold:** During an active call, select **Hold** to put the call on hold.

- Start Recording:** Allows you to start recording the active call.

- Mute:** During an active call, select **Mute** to disable/enable the microphone.

- Adjust volume:** Allows to you change the volume level.

- Phonebook:** During an active call, you can access the contact numbers.

- Call History:** Displays the SIM1 and SIM2 call history.

- Message:** Allows you to view the messages stored in the device.

Compose and send a text message
Your device supports text messages beyond the limit for a single message.

To write a text message:

- Press **Menu→Messages→Write Message→New SMS**, to display the **Write Message** screen.
- While writing a text message, you can do the following :

- To switch between the **English, Hindi character and Numeric mode** (123), press **#**.
- To erase the last character typed, select **Clear** by pressing the **Right Soft key**. Press and hold **Clear** to erase more than one character.

1

2

3

4

5

6

7

8

9

10

11

12

13

Note: Do not move your hand until the captured photo displays on the screen as a still image.

Press **Left soft key** to view and use other camera **Options**:

- Select **More Options** to:

- **Shoot Mode** – Select the shoot mode for capturing the image as camera mode or camcorder mode.

- **Size** – Set the size of the image, as 1280X960, 640X480, 320X240, and 240X320.

- **Night Mode**- Set the mode as normal or night to capture images in low light area.

- **Brightness** – Allows you to adjust the brightness level of camera while capturing the image.

- **Contrast** – Allows you to increase or decrease the contrast for capturing the image.

- **Exposure Bias**– Allows you to adjust the exposure to capture the image.

- **Frame** – Select from the given frames for capturing the images.

- **Continuous Shots** – Select it to capture images in continuation. Select **Disable**, 3 Shots and 6 Shots.

- **White Balance** - Increase or decrease the white balance to get image colors to display as accurate as

14

- possible. You can select auto, incandescent, fluorescent, sunny day and cloud.

- **Delay** – Select the delay in time as 3s or 10s so that your camera will capture the image automatically after the delay time. You can choose to disable the option for an immediate capture.

- **Effect** – Set the effect that you wish to use for the captured images. You can choose Normal, B&W, Blue, Green, Yellow, Red, Sepia and Negative.

- **Image Viewer:** View the clicked images captured by your phone. change folder, send, slide play, delete, set image as wallpaper and so forth.

- **Settings:** Allows you to customize settings of the camera while capturing images.

- **Quality** – Set the quality for capturing the image, as high, medium and low.

- **Banding** - Set the banding frequency between 50Hz and 60 Hz.

- **Shutter Sound** - Set **Activate/Off** to enable or disable the photo that camera makes while taking a photo.

- **Auto Save** – Select **Activate** to save the captured images automatically or select **Off** to let the phone ask you to save the images.

- **Storage:** Select **Phone** or **Memory card** as the storage space for saving the captured images.

- **Restore Default Settings** – Allows you to restore default camera settings for capturing the images.

- **Help:** In help, press **Up** and **Down Navigation keys** to **Increase and Decrease the Zoom** level. Press **Left** and **Right Navigation Keys**, you can access more **Camera Options**.

Video Recorder

Press **Menu→Multimedia→Video Recorder**, to launch the Video recorder application.

Position the camera towards the moving object, and press the **Record (OK key)**. Press **OK key** to play and pause the video recording. The video that you record can be of **3GP** and **AVI** file format.

To **Stop recording**, press the **Left Soft Key**. As you stop the recording, the video will automatically **save** the **Video** folder of Phone or Memory card.

Press **Left soft key** to view and use other camera functions:

- Select **More Options** to:

- **Shoot Mode** – Select the shoot mode for recording the video. You can choose between camera mode and Camcorder mode.

- **Size** - Set the size of the video, such as 320X240, 176X144, 160X128 and 128X96.

- **Brightness** – Allows you to adjust the brightness level of camera while recording the video.

- **Contrast** – Allows you to increase or decrease the contrast for recording the video.

- **Effect** – Set the effect that you wish to use for the recorded videos. You can choose Normal, B&W, Blue, Green, Yellow, Red, Sepia and Negative.

- **View Video Directory:** View the videos stored in your phone. Select **Options** to new folder, send, delete, details and so forth.

- **Settings:** Allows you to customize settings of the camera for recording the videos.

- **Banding** - Set the banding frequency between 50Hz and 60 Hz.

- **Audio player** - Set **Activate/Off** to enable or disable to record the audio while recording the video.

- **Video Format** – Allows you to select the recording format as AVI or 3GP to record a video file.

- **Storage:** Select **Memory Card** as storage space for saving the recorded videos.

- **Help:** In help, press **Up** and **Down navigation keys** to **Increase and Decrease the Zoom** level. Press **Left** and **Right Navigation Keys**, you can access more **Video Recorder Options**. Audio Player

Press **Menu→Multimedia→Audio Player**, to launch the audio player application.

Your device provides you a friendly audio player device for entertainment purpose. The supported file formats are WAV, MIDI, MP3, and AMR.

- Press **OK key** to play and pause the song.
- Use **"#"** and **""** keys to **increase and decrease the Volume** respectively.

- Press **Left and Right Navigation keys** to change the tracks in audio player.

- Long press **Left and Right Navigation Keys** to rewind and forward the song respectively.

- Press **Down navigation key** to customize **Equalizer** settings.

- Press **Up Navigation key** to **stop** the audio player.

Video Player

Play videos stored on the phone memory or the micro SD cards.

If you are a first-time user, select **Player List** to have the device automatically search for videos stored either on the **Video** folder of memory card and adds them to the default playlist. With the video player, you can watch videos in 3GP and MP4 formats.

You can also select **Options** to perform additional functions:

- Press **OK key** to pause and resume the video.

16

- Press **Up and Down Navigation keys** to increase and decrease the volume respectively.
 - Press **Left and Right Navigation keys** to switch between the videos.
 - Long press **Left and Right navigation keys** to **rewind** and **forward** the video respectively.
 - Press **→** to watch the video in the **full screen** mode and press it again to exit from full screen.

Image Viewer

To view photos stored on your device, press **Menu→Multimedia→Image Viewer**.

The Image viewer function stores all the images, which are captured by the phone camera and are stored either in **Photos** folder of phone memory or micro SD card. It provides you options, such as set as wallpaper, delete, share, mark, rename, slide play and so forth.

FM Radio

You can turn your mobile phone into a portable FM radio device. The quality of the radio broadcast depends on the coverage of the radio station in that particular area.

Use the headset from the product packaging and connect it to the device to operate FM radio. The headset acts as the antenna for your device that helps to detect radio signals from nearby stations.

Listening to the FM Radio

To listen to the FM radio:

1. The headset acts as an antenna and helps receive radio broadcast signals. To operate FM radio via headset, you can connect the headset into the headset jack of your device.
2. In idle mode, press **Menu→Multimedia→FM Radio** or simply press **Right navigation key** in the idle mode to launch **FM radio application**.
3. Turn on the FM radio. If you turn on the FM radio for the first time, confirm the **auto search** and **save** for channels.
4. Use **Left and Right navigation keys** to switch from one radio station to another.
5. Press **OK key** to play and resume the FM radio.
6. Use **"#"** to increase the volume, and **""** to decrease the volume.
7. Press **Exit** to stop FM radio.
8. Press **Down navigation key** to start the recording of current radio broadcast. Press **Stop** (Right Soft key) to stop the recording or press **Pause** (Left Soft key) to pause the recording. As you stop the recording, you will ask to rename the FM recording. Press **OK** to confirm saving the recording.
9. While playing **FM radio**, press **Power/End key** to play it in **Background**, which allows you to perform other functions on your phone.

FM Radio Options

In FM Radio, press **Left Soft Key** to access the following options:

- **Auto Search And Save:** Allows you to search and save channels automatically.
- **Channel List:** View and edit your favorites channels, and also give name to the channels.
- **Save:** Allows you to name the saved channels.
- **Manual Search:** Manually enter the channel frequency.
- **Speaker On:** With the headset connected to your device, select open speaker to listen to the radio using the device speaker.
- **Background Play:** Select whether to play or not to play the FM radio in the background while using other applications.
- **Record:** Allows you to record the current FM broadcasting program.
- **Schedule FM Record:** Turn on to record the broadcast on scheduled time.
- **Record File List:** Allows you to view and play all the recorded FM radio broadcasts.
- **Storage** – Select **memory card** or **phone** to save recordings.
- **Help**

Sound Recorder

With Sound recorder, you can record voice conversations and save the voice recordings as a sound clip, and play

the sound clip. Sound recorder supports the AMR, WAV file format.

Press **Options** to perform additional actions:

- **Start recording:** Start recording sound.
 - **Record file list:** Lists all recorded sounds.
 - **Storage:** Select the storage as phone memory or memory card for storing all the sound recordings.
 - **File Format:** Select the file format to record clip in the respective format.
- Note:** If the sound file is set up as ringtone, once renamed, then the sound file will no longer be available with audio profiles.

Movie JukeBox

Press **Menu →Multimedia → Movie JukeBox** to access the function. **Movie JukeBox** helps you to play super-compressed movie files. You can play specific movie format

"KMV" that is a proprietary compressed video format, with which you can enjoy more movies stored on your memory card under Movie JukeBox folder. For example, normally in a 2GB memory card, you can store a maximum of two movies. With the help of Movie JukeBox, you can store up to 40 movies. Please note this application is memory card dependent.

Note: To compress movie files (format, such as

.avi and MP4) into .KMV format, you are required Movie JukeBox converter tool along with the instructional guide which is available on our website www.videoconmobiles.com

Alarm
Press **Menu→Alarm**, to set the alarm to ring at a specific date and time. On a selected Alarm, press **ON (Left navigation key)** to activate it and press **Off** to deactivate the alarm.

Select **Edit** to access the following sub-options:

- **Message:** Set the customize message for the alarm.
- **Time:** Set the time at which you wish to ring the alarm by using 0-9 Number keys.

- **Ringtone:** Select the tone of the alarm from default ringtones or user defined ringtones.

- **Repeat Mode:** Select the type format of the alarm, whether you wish to ring the alarm once, daily or weekly.

Phonebook
Save and update contact information, such as name and phone numbers. You can also organize your contacts into Groups.

You can set caller picture, alert and a personal ring tone to the contact and also organize your contacts into Caller groups.

Press **Menu→Phonebook** to view the stored contacts or in idle mode, press

Right soft key to directly access the **Phonebook**.

The **Phonebook** menu comprises following tabs:

- **All:** Use to view all the contacts available in the Phone, Groups, SIM1, SIM2, and also Black list numbers.
- **Most Used:** Use to view the frequently which you called
- **Groups:** Options are as below:
 - **SIM1/SIM2:** Use to view the contacts available in the SIM1 and SIM2.
 - **Family/ Friends/ Business/Classmates:** Use them to organize your phonebook for easier access, and faster retrieval of contacts. For example, you can put all of your friends in the **Friends** group, and your office colleagues under the **Business** group. Combining contacts in a group allows you to perform the same action for multiple contacts quickly. You can change the name of the group and can change the group of any contact. For example, you could collectively send greetings to all contacts in the group. By default, every new number added will be categorized under unclassified.

Phonebook Options

Select a contact and choose **Options** to view actions that you can perform for the selected contact:

- **New:** Select it to add new contact to Phone, SIM1 or SIM2.
- **Write Message:** Create and send a SMS or MMS

19

- **SMS-** You can create and send a text message to the selected contact.

- **MMS-** Create and send multimedia message (check the availability of the service with your service provider) to the selected contact.

- **Call:** Place a voice call to the selected contact.

- **Delete:** Remove number from the contacts list.

- **Delete Multiple:** Remove selected number from the contacts list.

- **Delete Phone Contacts:** Remove number from the contacts list which are stored on phone memory.

- **Delete SIM1 Contacts:** Remove number from the contacts list which are stored on SIM1.

- **Delete SIM2 Contacts:** Remove number from the contacts list which are stored on SIM2.

- **Move:** Move contact to an alternate storage location, such as, phone, SIM1/2 or memory card.

- **Add To Blacklist:** You can add contacts saved in your phonebook to the Blacklisted contacts so that you will not receive calls from those numbers. In the Blacklist contacts, you can view and remove blacklisted contacts. To add contact numbers in the blacklist list, you need to select the **contact number → Options → Copy → Copy To Phone → Blacklist**.

- **Import/Export:** You can copy or import/export marked contacts.

- **Send vCard:** You can the vCard of the number via SMS, MMS or Bluetooth.

- **Others:** The others options available in contacts are:

- **Speed Dial**– With speed dialing, you can connect to the desired contact number quickly. You can

- assign any contact number to one of the number keys (2-9) to enable speed dialing on your device and by default (1) number key is enabled for voice mail. On the keypad, press and hold the number key corresponding to the desired contact number to initiate a call. You can set the **status to On or Off** and **set the contact numbers** on the number keys (2-9).

- **Own number:** You can add your own number to your SIM card.
- **Memory Status** – View the used and available memory for storing contacts in SIM1/SIM2 or Phone memory.

Add New Contact

To add a contact:

1. Press **Menu→Phonebook→Options →New**.
2. Choose **Select Storage** such as SIM1/SIM2 or Phone, and then edit **Name** to enter the name of the contact. Then, select **OK**.

20

3. Select and edit **Mobile** to enter the phone number, and then select **OK**. Select **Save** to save the contact. You can also add more details to the contact.

Note: If you choose to add the contact in phone memory, then you can add more details, such as home number, URL, ringtone and select them to unclassified group.

Search Contact

Search a contact just by entering the first few letters in the contact's name. As you type, all matching contacts display as a list, use the navigation keys to select the required contact, and press the **Dial key** to initiate a call to this contact by choosing the desired **SIM Card**.

File Manager

View files and folders stored on the **Memory card**. In memory card, you can view various options, such as Photos, Audio, My music, Answering machine, and so forth. Select the desired folder and press **Options** for additional actions:

- **New folder:** Allows you to create a new folder to store your files.
- **Delete:** Allows you to delete the folder.

- **Details:** Allows you to view the details related with the folder.

- **Edit:** Allows you to edit the details of folder, such as rename it, copy or move the folder to another location in memory card.

- **Search:** You can search the files in the folder.

- **Sort:** Sort the files by name, time, size and type.

- **Mark:** Allows you to mark, unmark, mark all and unmark all the folders in the memory card to perform one single function.

- **Memory Status:** Allows you to check the Phone/memory card capacity and format the **Phone/memory card**.

Settings

Use Settings to customize the device settings, such as Phone settings, Display settings, Security settings, Call settings and other options, which can be accessed by Navigation keys to secure the data you have stored in the device.

Press **Menu→Settings** to **display the settings menu**.

Call Settings

Dual SIM Settings: You have following options listed under Dual SIM settings:

- **Standby Mode:** Allows you to activate SIM1, SIM2 and Flight mode.

- **Reply by Original SIM:** Allows you to reply to a SMS, call or MMS by the same SIM, on which you have received the SMS, call or MMS.

- **Set SIM Name:** You can give name to both the SIM cards according to your choice.

- **Set SIM Color:** You can set color to both the SIM cards according to your choice.

- **Set Dual SIM Call Divert:** By this you can activate call divert on both of your SIM card to take benefit when either one of the SIM card in active call.

- **Fixed dialing:** Limit outgoing calls to specific numbers only. you need PIN2 from operator side to activate this.

Call Divert

This feature allows you to divert incoming calls from SIM1/SIM2 to voice mail or another phone number. You can activate/deactivate this function to all calls, voice calls, and check the query status for options. The sub-options available for each function are, call forwarding unconditional, call forwarding on busy, call forwarding on no reply, divert if unreachable, and cancel all diverts. This is network provider dependent service.

Press **Menu→Settings** to **display the settings menu**.

Call Waiting

You can activate this function to answer an incoming call in between an existing active call. Under query status, you can view the current activation or deactivation status.

Call Barring

Use this function to restrict the calls you make or receive with your device. Under call barring, the options are outgoing calls and incoming calls. You can also cancel all call barring. To change the barring password, you may required to put the old password. In

order to activate this service, you need to check the availability with your network service provider.

Reject Call Time

You can set the time duration to reject the active call.

Caller ID

Enables you to display Own ID, Display ID by network of the caller ID of the phone. It is a network based service.

Advance settings

Enable you to set others settings. The options are:

- **Call Time Minute Reminder:** Set this function to On or Off to receive a warning tone after selected time in the call.

- **Auto Redial:** You can select **On** or **Off** to redial the number automatically when a call is not connected.

- **Connect Notice:** Activate this function to receive a vibration notification when your call is connected.

- **Reject By SMS:** Allow you to reject the incoming call and send SMS to caller from the list of preloaded templates.

- **Auto Call Record:** Select **On** or **Off** to record the incoming calls automatically. The recorded phone conversations will be saved in the **Auto Call Record** folder of memory card. If the number is saved in the

22

contacts list, then phone will create the folder with the saved name else it will save with the phone number. All the future conversations will be saved in the same folder. This feature is memory card dependent. Please note if the memory card storage is full, then the phone will stop the auto call recording function. You need to ensure to take back-up of earlier conversations periodically on a PC so that memory card is not sufficiently free.

Network settings

Allow you to choose Network Account (data account), On/Off GPRS Service, On/Off Data Roaming and Network Selection.

Phone Settings

You have following options listed under phone settings:

- **Date & time:** Lets you set time, date, time format, and date display time on idle screen.

- **Language Settings:** The device currently supports English and Hindi both as display & writing.

- **Shortcut Settings:** You can modify shortcuts assigned on RSK & navigation keys.

- **Schedule Power On/Off:** Lets you set a particular time on the phone when the phone should auto power on/off itself.

- **Battery Status:** You can check the status of battery level of your phone.

Display Settings

Under display settings, you can set a host of different characteristics of the phone. You have following option under display settings:

- **Wallpaper Settings:** Set favorite wallpaper on the main screen of your phone. The default wallpapers are system default wallpapers and more wallpapers.

- **Idle Display Settings:** Allows you to choose between time & date, service provider, today's schedule, and customized banner to be displayed at idle display screen.

- **Brightness:** Allows you to adjust the brightness of phone's display.

- **Backlight:** Control the time in seconds for the phone display.

- **Keypad Backlight Time:** Allows you to select the time in seconds for the keypad backlight time.

Security Settings

Adjust settings to secure your device and data:

- **PIN:** You can activate, modify and off the PIN lock for SIM1 and SIM2. To use these features, you need to check with your service provider.

- **Modify PIN2:** You can modify the PIN2 for SIM1 and SIM2. To use these features, you need to check with your service provider.

- **Phone Locked:** Activate this function to enter the password as

you switched on your phone. The default password is "0000".

- **Change Phone Password:** You can modify the phone lock password the default password is 0000.

- **Privacy Protection:**